


# Boom Camera

## ATTACHING THE SNAP-ON JACKET TO THE CAMERA HEAD USB CABLE

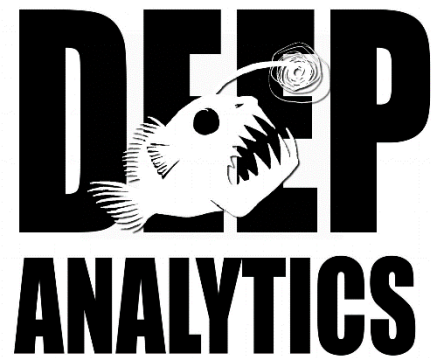

## Components

2 x Cable Covers

1 x Lock Ring

1 x Coiled USB  
Cable




**Step 1:** Slip the Lock  
ring onto the USB  
Cable



**Step 2:** Attach a cable cover to the USB Cable



**Step 3:** Attach the second cable cover over the other half of the USB Cable.

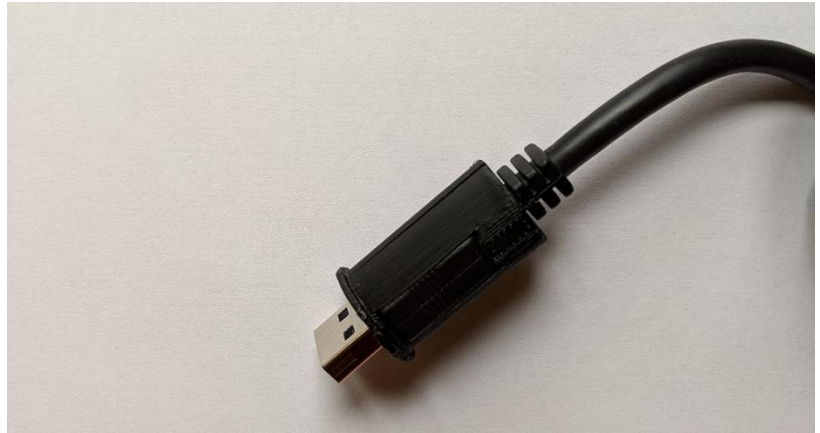

**Note:** To fit snugly, both cable covers should lock into each other

**Step 4:** Pull the lock ring up on the top of the cable.



**Step 5:** Connect USB cable to Camera Head, screw in to tighten